

BLUE WIRE IGNITION CONNECTION TECH TIP

WHEN BT SWITCH DOES NOT ILLUMINATE, DISCONNECT BLUE WIRE IN PIN #23 OF BT MODULE.

CONNECT BLUE WIRE OF BT MODULE TO EXTENSION HARNESS PROVIDED IN SACK PART OF KIT. LOCATE 12 VOLT ACC POWER SOURCE AND CONNECT EXTENSION HARNESS. THIS WILL PROVIDE ACC POWER TO THE BT MODULE.



BLUE WIRE IGNITION CONNECTION TECH TIP

WHEN BT SWITCH DOES NOT ILLUMINATE, DISCONNECT BLUE WIRE IN PIN #23 OF BT MODULE.

CONNECT BLUE WIRE OF BT MODULE TO EXTENSION HARNESS PROVIDED IN SACK PART OF KIT. LOCATE 12 VOLT ACC POWER SOURCE AND CONNECT EXTENSION HARNESS. THIS WILL PROVIDE ACC POWER TO THE BT MODULE.

